



PUNGO QUICK START


Drop argon cartridge
in cartridge cover.

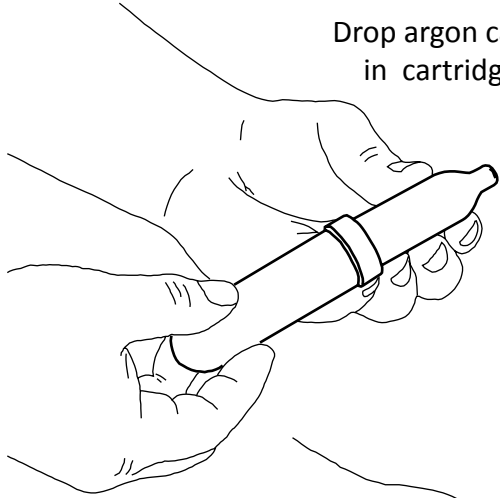



After checking that
the sealing o-ring is
in place....

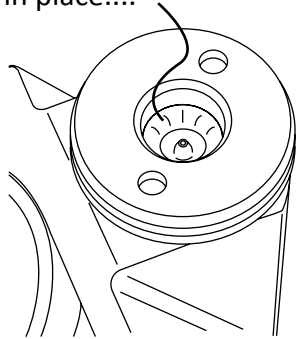


...screw cartridge
cover onto the Pungo.

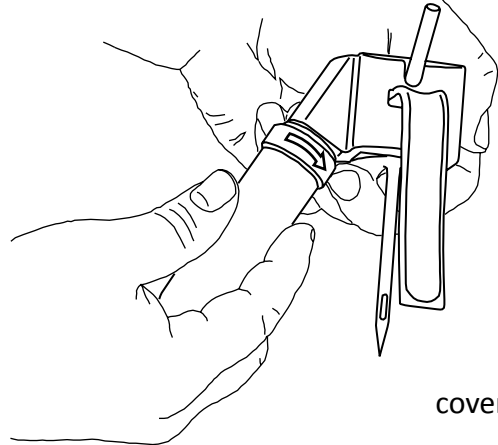


After removing foil,
install sealing
cap on bottle, making sure it's
seated firmly.

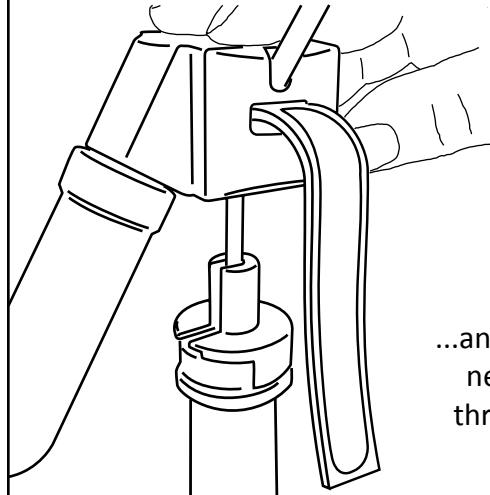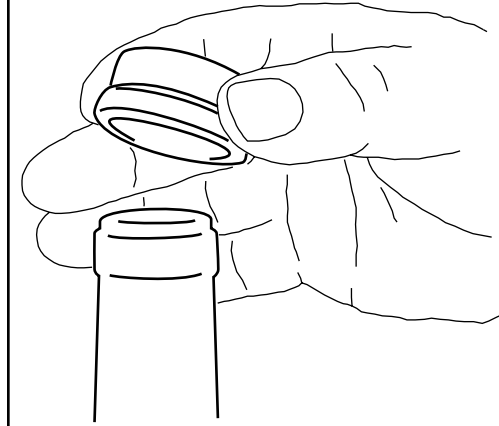

Snap on the
insertion guide...

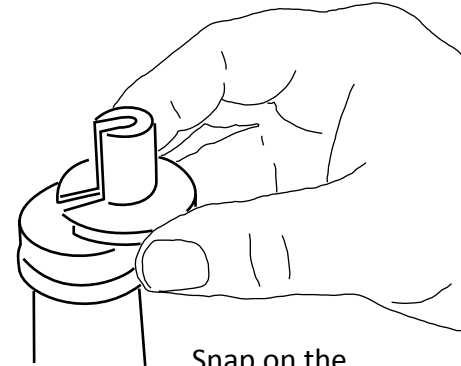


...and insert Pungo
needle vertically
through the cork.

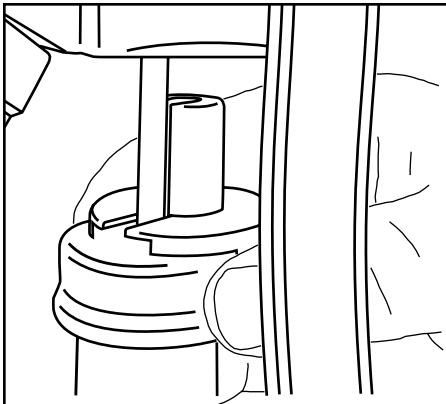


Slip off the
insertion guide...


...and continue
inserting the Pungo until
seated against the sealing cap.

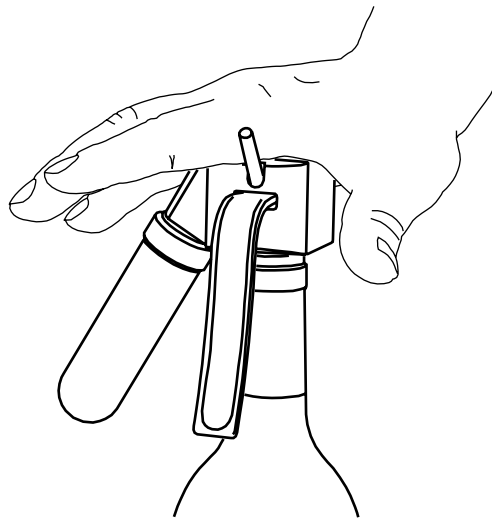


Tip the bottle and gently
pull the trigger to pour.

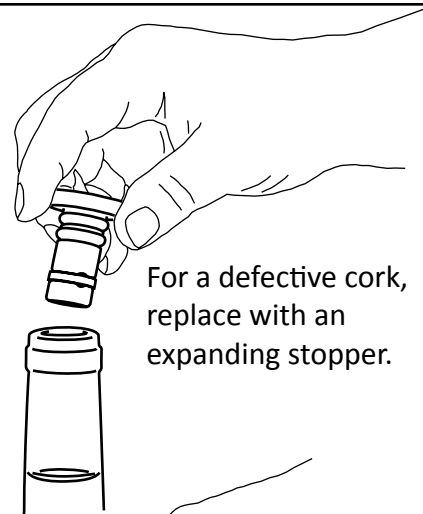

For a defective cork,
replace with an
expanding stopper.

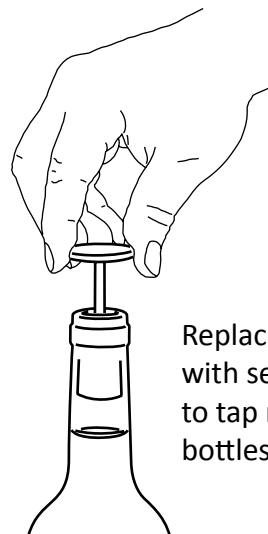

Replace Pungo
with sealing pin
to tap multiple
bottles.

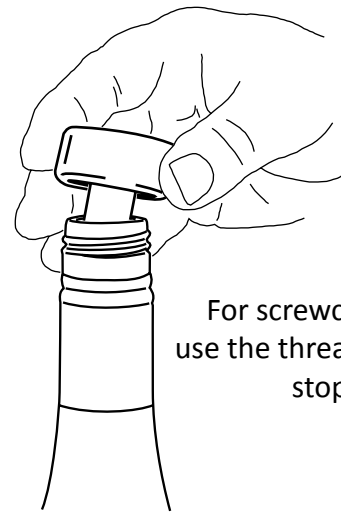

For screwcaps,
use the threaded
stopper.

For the complete instruction
guide go to: www.pungo.us